

6. Technical Specifications

Operating Temperature Range		20°C to 30°C		
Settable Temperature Range		40.0°C to 75°C		
Temperature Accuracy		±2.0°C		
Reservoir Capacity		5.0 Liters		
Altitude		Up to 2000m		
Humidity		80% non-condensing		
Voltage fluctuations		±10%		
Overvoltage		Category II		
Pollution		Degree 2		
Electrical	Model # 145600	115VAC	50/60hz	250W
	Model # 145600-2	230VAC	50/60hz	250W
Approvals	Model # 145600 Model # 145600-2	Certified to UL 61010-1 and CSA C22.2 CE Certified		

7. Maintenance and Service

The reservoir screen in the bottom of the reservoir should be checked and cleaned periodically.

7.1 Cleaning

Disengage power cord prior to cleaning. Paraffin build-up should be avoided around the top area of the Wax Dispenser. The outer casing may be cleaned with water and a damp cloth. Do not submerge or immerse the Wax Dispenser in water. Before using any cleaning or decontamination method, users should verify that the proposed method would not damage the equipment.

7.2 Replacement of Fuses

There are two supply fuses located in the fuse drawer. To replace the fuses:

- Disconnect the unit from the power supply.
- Remove the plug from the socket in the back of the unit.
- Pull back on the fuse drawer (see figure 2)
- Pull out the fuse drawer
- Check and replace with the correct fuses if necessary. The fuses must be 5 mm x 20 mm fast acting, rated 4A and 250V.
- Push the fuse drawer back in. Reconnect unit to the power supply.

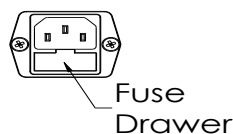


Figure 2