## 4.4 Adjusting the Rocking Speed

Start the Rocker II by activating the power switch. To increase rocking speed adjust the speed control clockwise.

### 5. Accessories

5.1 Staking Tray 12" x 12" with flat mat Boekel Part Number 260355

5.2 Dimpled Mat 12" x 12" (vinyl)

Boekel Part Number C2202208

5.3 Flat Mat 12" x 12" (rubber)

Boekel Part Number C2202162

# 6. Fault Diagnosis

## Symptom Possible Cause

1. Unit does not operate

- a. Unit not switched on
- b. Unit not plugged into power supply
- c. Power supply failure

#### **Action Required**

- a. Switch on
- b. Plug in, switch on
- c. Check that other electrical appliances on the same circuit are working

# 7. Technical Specifications

This equipment is intended for indoor use and will meet its performance figures within the ambient temperature range of  $+4^{\circ}$ C to  $40^{\circ}$ C, with maximum relative humidity of 80% (non-condensing). Installation Category II (transient voltages). Pollution Degree 2 in accordance with IEC 664. Suitable for operation at altitudes of up to 6500 feet.

## **Specifications:**

Temperature Range: +4°C to 40°C

Supply Voltage Range: 115V +/- 10%, 50/60 Hz

230V +/- 10%, 50/60 Hz Model 260350: 22 W

Power Rating: Model 260350: 22 W

Model 260350-2: 22 W

Load Capacity 2.7 kilogram (6 lbs.) (with Stacking Platform) 2.3 kilogram (5 lbs.)